



Important!

Audi

Please give copies to
all your Audi Technicians

Technical Bulletin

Subject: **BOSE® Sound System, Volume Fluctuation**

Group: **91**

Number: **04-17**

Model(s): **See Table**

See Table

Date: **Aug. 12, 2004**

Condition

Customer perceived condition of radio volume changing by itself may be caused by the noise compensation function "Audiopilot", which is part of the BOSE® amplifier.

Some customers may find this function to be too aggressive and for some individuals a noticeable volume fluctuation can be heard.

Note:

Audiopilot can not be selected in the radio menu. The selectable radio function "SVC" is a vehicle speed controlled volume adjustment and operates independently from the Audiopilot.

 
Note:

This condition is not related to in-car microphone. Do not muffle or disconnect microphone.

Production

Affects vehicles built after VINs listed below.

Year	Model	VIN
2004-2005	A4 & S4 Avant	8E_4A121218
2004-2005	A4 & S4 Sedan	8E_4A121218
2005	A4 & S4 Cabriolet	All
2003-2005	TT Coupe	All
2003-2005	TT Roadster	All



Audi

Important!

Please give copies to
all your Audi Technicians

Technical Bulletin

Overview

There are two different Service Procedures incorporated into this Technical Bulletin.



- Audiopilot Deactivation
- Enabling Speed Volume Control (SVC), if necessary.

 
Service

Audiopilot Deactivation

The BOSE® amplifier Audiopilot function can not be disabled in the radio menu. The wiring harness electrical connector must be modified.

- If necessary, remove ignition key from ignition lock cylinder.
- Remove necessary trim. See appropriate Repair Manual, *Body Interior, Repair Group 70*.
- Disconnect amplifier electrical connector.
- ◀ - Remove tie strap and electrical connector cover -arrows-.
- Remove insulating tape on harness to expose additional wiring.
- ◀ - Locate white wire in cavity 6 -arrow-.

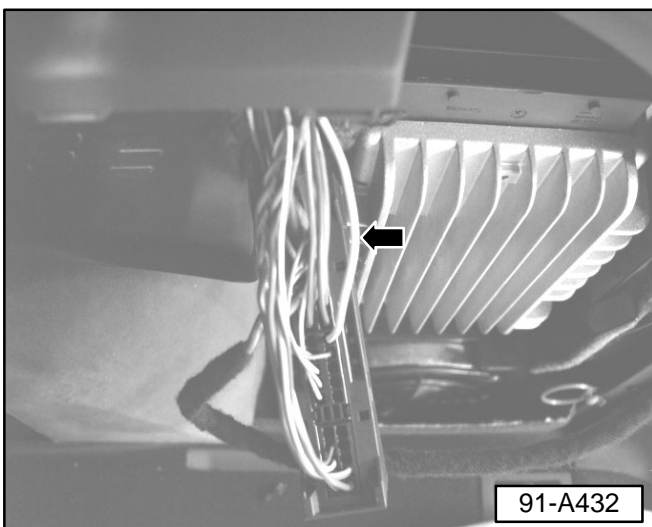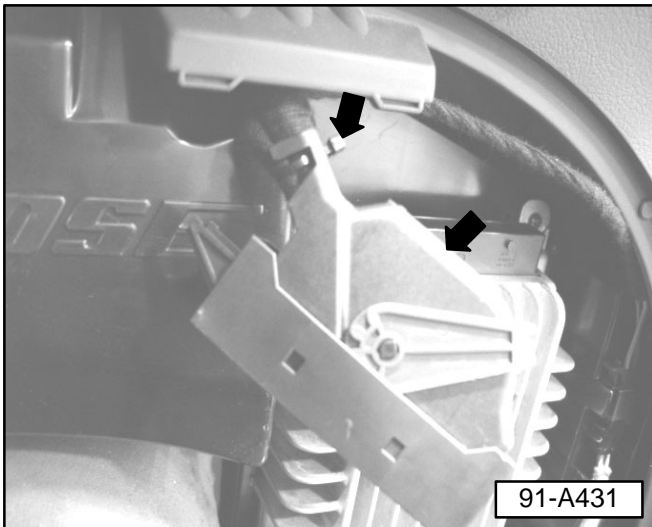




Audi

Important!

Please give copies to
all your Audi Technicians


Technical Bulletin

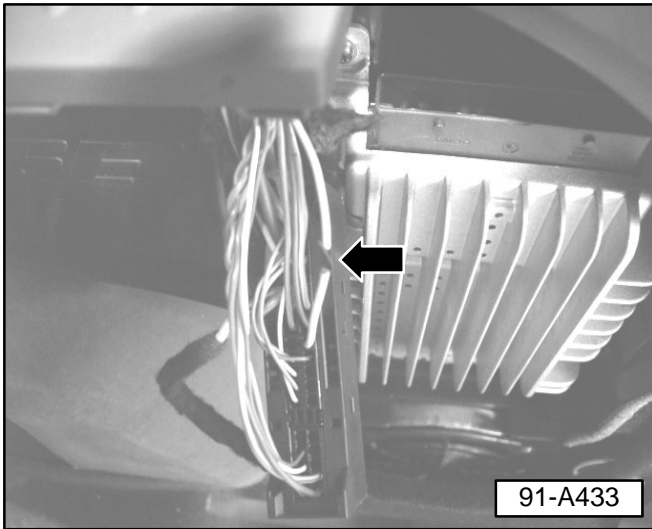


- ◀ – Cut white wire in location shown (approx. 2 1/2 inches).

Note:


Make sure there is enough wire on both sides of cut to install a butt connector.

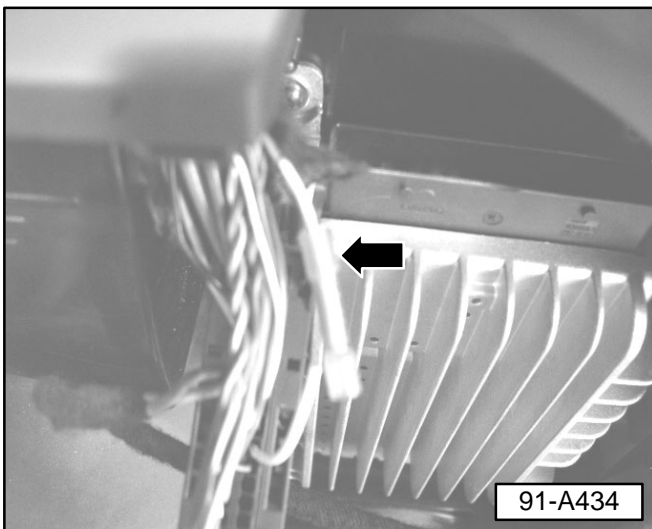

- Strip insulation on both wire ends 6-7 mm (approx. 1/4 inch).
- ◀ – Install blue butt connector Part No. 111 971 939B onto harness side of white wire -arrow-.
- ◆ Crimp butt connector using appropriate crimping tool from VAS 1978 Repair kit.

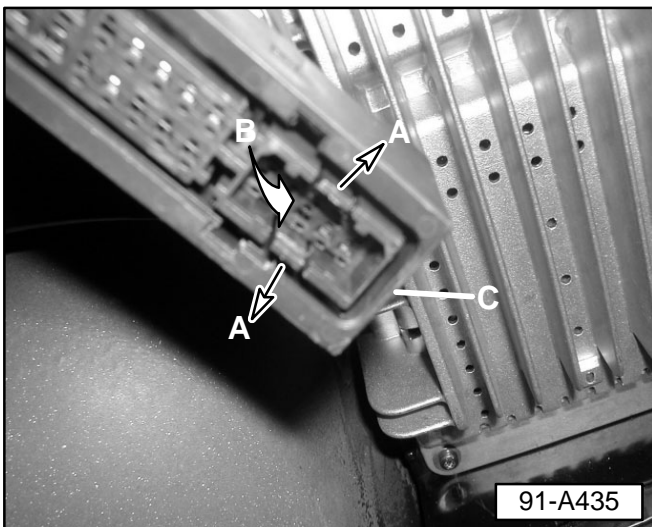

 - ◀ – Push locking tabs outward -A- and slide inner hardshell -B- out of outer hardshell -C-.




Audi

Important!

Please give copies to
all your Audi Technicians

Technical Bulletin

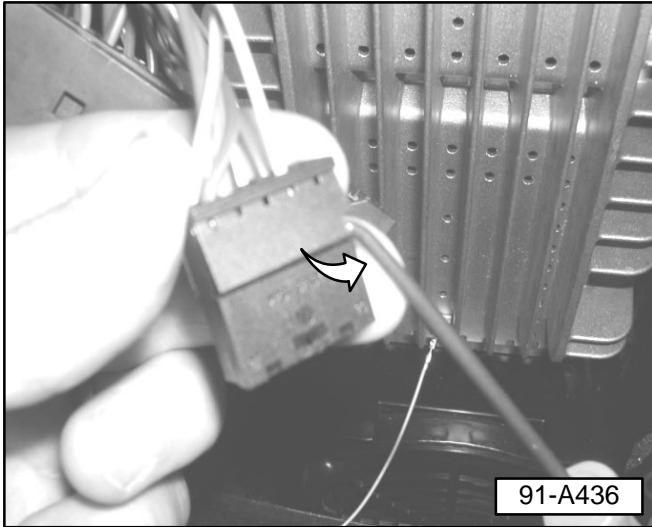


- ◀ – Release inner hardshell wire lock by rotating outward.

Note:


Release lock on Pin 24/25 side of connector.

On all A4, S4 & TT Coupe

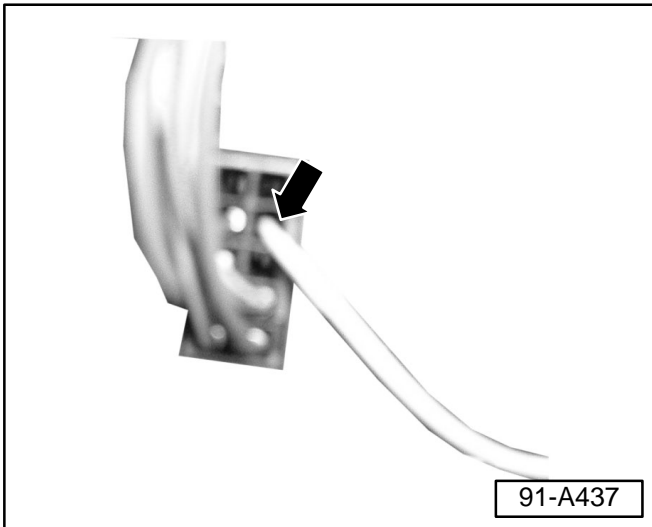

- ◀ – Insert terminal of repair wire Part No. 000 979 025A into cavity 24 of amplifier connector.


On TT Roadster

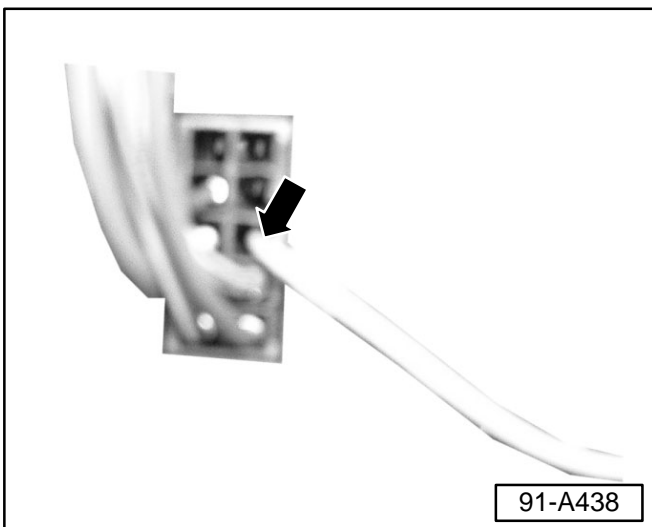

- ◀ – Insert terminal of repair wire Part No. 000 979 025A into cavity 25 of amplifier connector.

On All Models

 
- Apply inner hardshell wire lock.
- Assemble inner and outer hardshells.



Audi

Please give copies to
all your Audi Technicians

Technical Bulletin

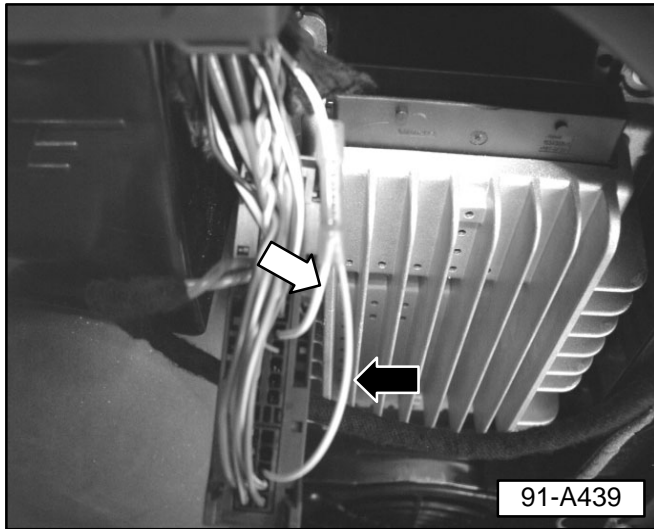

- ◀ – Route repair wire to open side of butt connector -black arrow- and cut repair wire to length.
- Strip insulation on from repair wire 6-7 mm (approx. 1/4 inch).
- Insert connector side of white wire into open side of butt connector -white arrow-.
- ◆ Crimp butt connector using appropriate crimping tool from VAS 1978 Repair kit.


With repair wires crimped:

- Apply Electric Hot Air Blower VAS 1978/14 and Adapter for Heat Gun VAS 1978/15 to shrink and seal butt connector.

Note:

Connector must be heated by moving adapter tip from center outward until fully sealed.

- Re-tape exposed wiring and reassembly amplifier electrical connector.
- Connect amplifier electrical connector.
- Connect battery ground (GND) strap.

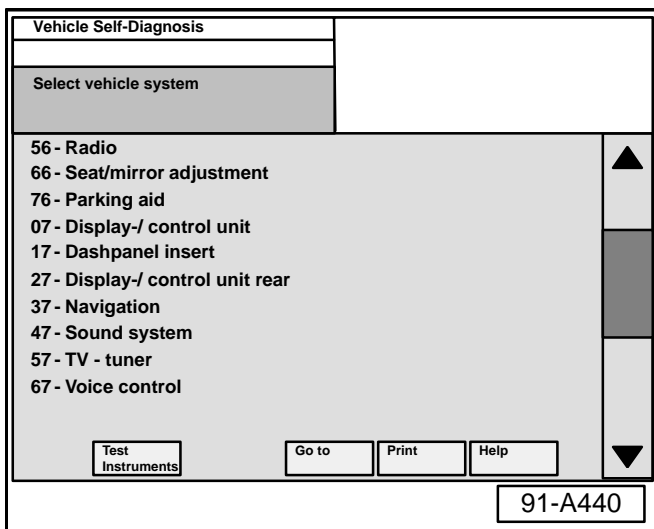

Enabling Speed Volume Control (SVC)

- Connect VAS 5051/5052 Diagnostic tool.
- Switch ignition ON.
- From Start-up screen, select “Vehicle Self-Diagnosis”.
- ◀ – Select vehicle system “56 - Radio”.



Audi

Important!

Please give copies to
all your Audi Technicians

Technical Bulletin

Vehicle Self-Diagnosis	56 - Radio
Select diagnosis function	Component part number Component description Coding XXXX Dealership number XXXXX
02 - Interrogate fault memory 03 - Final control diagnosis 05 - Erase fault memory 06 - End output 07 - Code control unit Coding subbussystem 08 - Read Measuring Value Block 10 - Adaption 16 - Access permission Component protection Identification services	
Test Instruments	Go to Print Help
91-A441	

◀ – Select diagnosis function “10 - Adaption”.

Vehicle Self-Diagnosis	56 - Radio												
10 - Adaption	Component part number Component description Coding XXXXX Dealership number XXXXX												
Enter channel number max. input value = 99													
<div style="border: 1px solid black; padding: 5px; display: inline-block;"> <div style="border: 1px solid black; padding: 2px; text-align: center; width: 40px; margin: 0 auto;">XXX</div> <table border="1" style="margin: 5px auto; text-align: center;"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>C</td><td>0</td><td>Q</td></tr> </table> </div>		1	2	3	4	5	6	7	8	9	C	0	Q
1	2	3											
4	5	6											
7	8	9											
C	0	Q											
Guided Fault Finding	Go to Print Help												
91-A442													

◀ – Input “66” on keypad to select “Channel 66.”
– Select “Q” button to confirm.

Note:

On some 2003–2004 TT models, Channel 66 will not be accessible. On these models, SVC is always available and can not be removed from the radio menu.



Important!

Audi

Please give copies to
all your Audi Technicians

Technical Bulletin

Vehicle Self-Diagnosis	56 - Radio
10 - Adaption	Component part number
Read and test channel 66	Component description
	Coding XXXXX
	Dealership number XXXXX
0 0 8	
<input type="button" value="Keyboard"/> <input type="button" value="Save"/>	
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>	
91-A443	

◀ Channel 66 value:

- ◆ “1” = SVC **not** available in radio menu.
- ◆ “0” = SVC available in radio menu.
- Change value to “0” using keyboard button or slider bar.

Note:

On some 2003 TT models, Channel 66 will already be set to “0”. On these models, no change is necessary.

- Select “Save” and “Accept” buttons to record change.
- Review SVC function, contained in owner’s manual supplement, with consumer.

When procedure applies to vehicles within the New Vehicle Limited Warranty, use the following:	
Part Identifier:	9144
Labor Operation: A4/S4 Avant	Trim Removal, Wire Installation & Enabling SVC: 91442300 30TU
Labor Operation: A4/S4 Sedan	Trim Removal: 70031900 70 TU Wire Installation & Enabling SVC: 91442300 30 TU
Labor Operation: TT (Coupe & Roadster)	Trim Removal: 70031900 40 TU Wire Installation & Enabling SVC: 91442300 30 TU